

Wholesale Chess Basic Digital Chess Timer with Bonus and Delay

User Manual



Wholesale Chess Basic Digital Chess Timer with Bonus and Delay

The Wholesale Chess Basic Digital Timer with bonus and delay is a reliable game timer that is easy to setup and use. We know that not everyone loves to read their user manual so in addition to the instructions below we have a video tutorial on our website which will show you how to set up and use the timer.


<https://www.wholesalechess.com/wholesalechessbasicdigitaltimer>

Key Features

- 1) **Count Down Mode:** Set the time for each player (time can be different for each side of the clock if desired) and clock will count down to zero. (maximum game time is 9:59:59 per player)
- 2) **Count Up Mode:** Start at 0:00:00 and count up on each side of the clock. (counts to 9:59:59 maximum per player)
- 3) **Bonus Time:** When enabled a fixed amount of time (up to 59 seconds per turn) will be added to one or both sides of the timer at the beginning of each turn. To learn more about the differences between bonus and delay time see the section “Bonus vs. Delay” listed below.
- 4) **Delay Time:** When enabled a fixed amount of delay time (up to 59 seconds per turn) will be allowed for each turn for one or both sides of the timer before the actual game time is decreased. To learn more about the differences between bonus and delay time see the section “Bonus vs. Delay” listed below.

- 5) **Alarm On/Off:** User can turn on or off an audible alarm that will beep when time runs out. (Count down mode only)
- 6) **Recall Last Settings:** When the timer is turned back on after being turned off the last timing mode used automatically comes up.

Product Diagram & Buttons

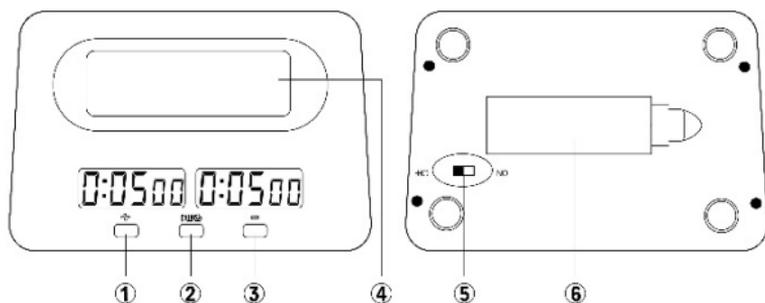

① [+]
When timer is in setting mode pressing this button one time will increase the value of the flashing field by 1. In play mode this button does not do anything.

② [> | |]
When timer is in play mode pressing this button one time will start or pause the current game.

When timer is in play mode and this button is pressed and held for two seconds the timer will enter setting mode.

When timer is in setting mode pressing this button once will move between time fields (i.e., hours, minutes, seconds) on the timer to allow the user to change the time, bonus, delay and alarm settings.

- ③ [-] When timer is in setting mode pressing this button one time will decrease the value of the flashing field by 1. In play mode this button does not do anything.
- ④ [Turn Lever] – When one side of the lever is depressed the timer on the opposite side will count up or down.
- ⑤ On/Off Switch – Slide switch to turn timer on or off and to reset timer for new game.
- ⑥ Battery Cover – Remove battery cover to install one AA battery.

Display



Both sides of the timer use the same display shown above.

Bonus Icon: If displayed the current timing mode has bonus enabled

Alarm Icon: If displayed the alarm is turned on

Delay Icon: If displayed the current timing mode has delay enabled

Operating Instructions

1) On/Off:

After installing the AA battery slide the [ON/OFF] switch on the bottom of the timer to ON.

When the timer is turned off and the battery remains installed the timer will remember the last used timing settings and will start with those settings.

When the battery is removed and reinstalled the timer will beep when turned on and the timer will return to the default setting displayed below with no delay or bonus and the alarm turned off.



Left Side



Right Side

2) Count Down Mode

When the timer is turned on it is in play mode by default. If the correct time is already set on the timer press [> |] to start the game. To set or change the time press and hold the [> |] button for two seconds to enter the settings mode. The first number on the left side of the timer will flash. This number represents the number of hours on the left side of the timer. Use the [+] or [-] buttons to increase or decrease this value. Once you have

the hour value set (between 0 and 9) press the [>|] button to move to the first minute value. Again use the [+] or [-] buttons to adjust the value. Once both minute values are set use the [>|] button to move to the seconds values and follow the same procedure to set. After setting the hour, minutes and seconds on the left side of the timer press the [>|] button to move to the right side of the timer. By default the same amount of hours, minutes and seconds will be automatically copied to the right side of the timer. However, you can manually change those to different values if desired using the same steps as above for the left side of the timer.

After you have hours, minutes and seconds set for both sides of the timer press [>|] and you will be taken to the bonus time option. (See “Bonus vs. Delay” section below for more information on Bonus and Delay options.) If bonus time is desired it can be set now using the same steps used when setting the hours/minutes/seconds. Maximum bonus time is 59 seconds. When left at 00 no bonus time will be added.

After setting any bonus time (if desired) pressing the [>|] will take you to the delay time settings. (See “Bonus vs. Delay” section below for more information on bonus and delay options.) Follow the same steps above to add delay time if desired.

After setting delay time (if desired) pressing the [>|] key will take you to the alarm option and 0 will be flashing on both sides of the timer. To turn on the alarm (audible warning on the last three seconds of the time on both sides) change the flashing value to 1 using the [+] button.

To leave it turned off leave the values at 0. The alarm can only be turned on and off in the setting mode and not in play mode.

After the user has turned the alarm on or off press the [> |] button to be taken back to the hours/minutes/seconds settings. Press and hold the [> |] for two seconds to exit setting mode and enter play mode. Ensure the [Turn Lever] is elevated on the side of the timer for the player who will play first and then press the [> |] button to start the game. To pause the timer at any point during the game press the [> |] button. To resume the timer press the [> |] button again. To reset the timer for a new game turn the timer off and then back on.

3) Count Up Mode

To use the count up mode set the game time to 0:00 00 on each side of the timer following the instructions as listed in the count down mode above. Ensure the [Turn Lever] is elevated on the side of the timer for the player who will play first. Press the [> |] and the timer will start to count up. When the [Turn Lever] is depressed the timer will start to count up on the other side. To pause the timer at any point during the game press the [> |] button. To resume the timer press the [> |] button again. To reset the timer for a new game turn the timer off and then back on.

4) Bonus versus Delay

The Wholesale Chess Basic Digital Timer gives you the option to add bonus time or delay time with each move when enabled. (See instructions above to enable)

Bonus Time: When enabled bonus time will be added to the timer for each player at the beginning of their turn. For example, if a player has 0:05:00 on their timer and a 10 second bonus is enabled, at the beginning of their turn 10 seconds will be added to their game time and the timer will start to count from 0:05:10.

Delay Time: When enabled a delay will count down for each player before any game time is used. If the player makes their turn before the delay time has expired no game time will be used. Unlike bonus time, no time is added to the game time with the delay option. The total amount of game time will never increase with the delay option. When the delay time is enabled and the game is started the player whose turn it is will see a count down on their side of the timer. The countdown is their delay time and once it has expired or they complete their turn their game time will then display on their side of the timer.

Both bonus time and delay time can be set to different values for each player if desired. Bonus time and delay cannot be set at the same time. If you set a delay time the bonus time will be disabled for that game and vice versa.

Maintenance & Warranty

Use a new alkaline battery only. When the timer will not be used for a long period of time (several weeks or more) remove the battery to avoid damage from a leaking battery.

Do not allow the timer to get wet. If needed the timer case may be cleaned with a slightly damp cloth. The display should only be cleaned with a dry, soft cloth.

Avoid prolonged exposure to sunlight or high temperatures.

Wholesale Chess offers a one-year manufacturer warranty on this timer from the date of purchase. Damage due to batteries or physical damage (dropped clock, cracked display, etc.) are not covered under warranty.

For warranty work please send the timer and a copy of your invoice to:

Wholesale Chess Warranty Coverage
695 N 900 W #5
Kaysville, Utah 84037
USA

Please allow 3 to 4 weeks for your timer to be repaired or replaced.

If you need a copy of your invoice or have any questions about your timer you can email us at info@wholesalechess.com or call us at 1-888-582-4377.